

HARD FLOORING

Regular Maintenance

Regularly sweep or vacuum your floor to remove loose dirt, grit or dust. It is important to use clean mops and neutral cleaning solutions when regularly cleaning your floor. Always dilute the floor cleaner to the manufacturer's instructions. Please ensure you mop your floor evenly and collect any excess liquid in a mop bucket.

Do:

- Install barrier mats at entrances to pick up grit and moisture. (Please note: rubber-backed mats may discolour the floor).
- Ensure your furniture is fitted with protective pads, where necessary, to prevent scratches.
- Use protective caps under heavy furniture to prevent indentation.
- Remove all spillages as quickly as possible to reduce the risk of staining and causing slip hazards.
- Always use clean equipment when maintaining your floor.
- Regularly trim pets claws as these can cause fine scratches.

Don't:

- use abrasive liquids or metal scouring pads as these can damage the floor.
- Clean the floor with solvents, caustic detergents washing up liquids, soap powders, bleach, furniture polished, petroleumbased products, pine gels, stain removers or highly coloured products. Such products may make the floor slippery and cause permanent damage.
- Drag furniture with unprotected feet across the floor.
- Use steam mops.

Regular cleaning is more beneficial to the floorcovering and is more cost-effective than occasional heavy cleaning.

We highly recommend using the PUREFLOR cleaning system to maintain your floor. These are available through Delta Floorworld 66 Mair St, Ballarat to receive a cleaning pack ½ price please bring in this cleaning/care advice. Pack includes Soft surface, Hard surface cleaner and trigger bottle.